




Make Your Life Easier

Package Contents

- 1 × Extension pole (extends up to 100 inches)
- 4 × Duster heads:
 - Gap duster
 - Microfiber duster (bendable by hand)
 - Ceiling fan duster (bendable by hand)
 - Cobweb duster

Recommended Applications

Head Type	Image	Best for
Gap duster		Baseboards, blinds, vents, window tracks, and narrow spaces.
Microfiber duster		Furniture, shelves, TV screens, and flat delicate surfaces (bend to fit as needed).
Ceiling fan duster		Ceiling fans, light fixtures, high corners, and large surfaces (bend to fit as needed).
Cobweb duster		Cobwebs, corners, high walls, and ceilings.

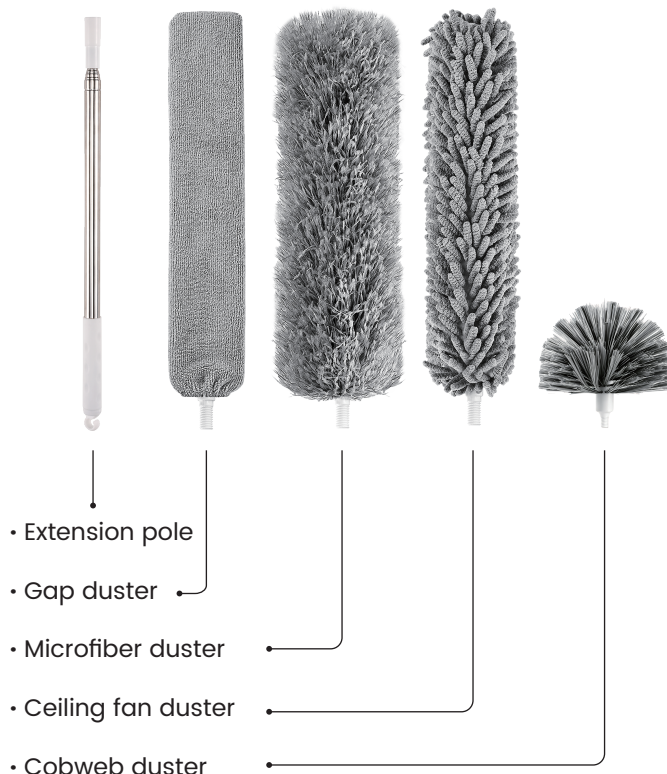

• Note: Product colors may vary. The item you receive may differ from the color shown in the images.

Usage Instructions

Adjusting the Telescopic Pole

- Adjusting the Telescopic Pole.
- Pull the inner sections outward with your other hand to extend the pole to the desired length.
- To retract, push the sections back into the handle until fully collapsed.



Using Bendable Heads

The microfiber duster and ceiling fan duster heads are bendable by hand. They may feel a bit stiff for first-time use, so please apply steady, firm pressure when bending.

- Hold the head firmly with both hands.
- Bend it into the needed shape (L-shape, U-shape, or angle) using steady, firm pressure.
- The head will retain its shape during use for precise cleaning.



Make Your Life Easier

Cleaning & Care

Machine-Washable Heads (Gap Duster & Ceiling Fan Duster):

- Remove the soft cover if detachable.
- Wash in washing machine on gentle cycle with mild detergent.
- Air dry only. Do not tumble dry.



Machine-Washable Detachable Cover

Hand-Wash Only Heads (Cobweb Duster & Microfiber Duster):

- Rinse under lukewarm water.
- Gently wash with mild soap and squeeze out excess water.
- Do not machine wash. Air dry only.



Hand-Wash Only

Tip: Clean the heads after each use or whenever visibly dirty to maintain optimal performance.